




Vortex Generator Painting Tips

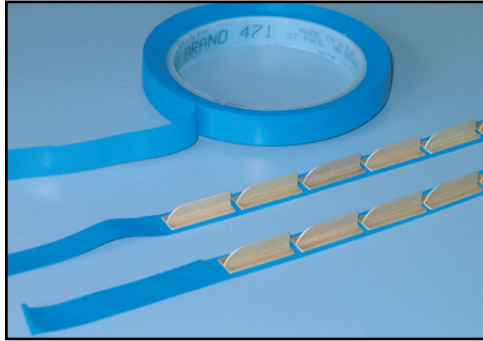


- ① Place the foot of the Vortex Generators on a piece of painter's striping tape, sticky side up. This plastic tape can be found at any automotive store. Please do not use masking tape - it will leave a residue of glue on the foot of the VGs and tends to disintegrate once sprayed with paint.

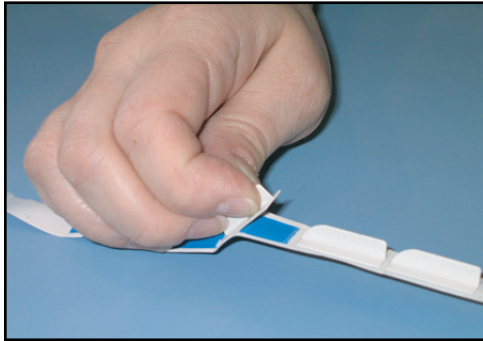

- ② After the VGs have been put on tape, make sure you secure it down. This will prevent the tape from moving during the painting process.

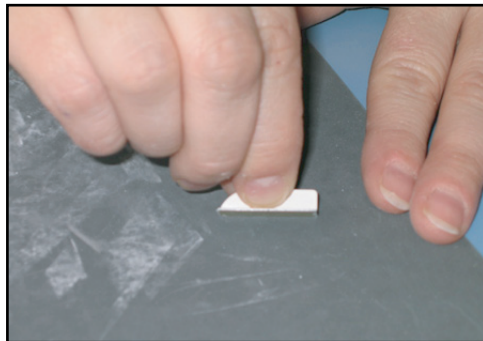

- ③ The VGs are alodined to allow them to accept paint without priming. Once the VGs have been painted and the paint has cured, peel the VGs off the tape.

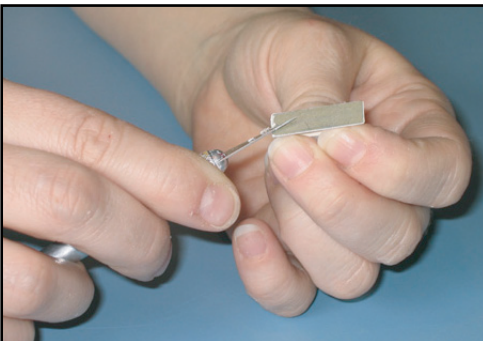

- ④ In some cases, you may notice extra paint or flash around the foot of each VG. Remove the extra flash with #600 sandpaper or with an X-acto knife.

The Vortex Generators are now ready for installation on the aircraft.

If you have any further questions, please call.



MICRO
AERODYNAMICS INC.
Vortex Generator Technology

(800) 677-2370
4000 Airport Road, Suite D
Anacortes, Washington 98221
(360) 293-8082 FAX (360) 293-5499
<http://www.microaero.com>
micro@microaero.com